


- Connect your source to the SE INPUT RCA jacks with highquality RCA cables.
- 2. If you have an optional DAC module installed, connect your digital source with a high-quality USB 2.0-rated cable less than 2 meters in length. If you don't have a module installed, this area will be covered.

Note: On some Windows machines, you may need drivers, available at schiit.com/drivers.

- Connect the supplied power cord to the AC IN input. Ensure the voltage matches your outlet. Do not run a 115V product from a 230V outlet.
- **4.** Optional: Connect the **PRE OUT** RCA jacks to powered monitors or an external power amp.

Note: when headphones are plugged in, the preamp outputs will be muted.

5. Turn on the **POWER** switch. Up is on. Down is off.

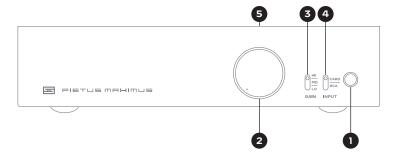

 Connect your headphones to the 1/4" headphone jack. For smaller headphone plugs, you may need a 1/8" to 1/4" adapter (not supplied).

Note: Some headphones with microphones use TRRS plugs, which may have compatibility problems with 1/8" to 1/4" TRS headphone adapters. If you are going to use a TRRS-terminated headphone, use a TRRS-TRS adapter.

Turn the knob to control volume to both headphone and preamp outputs. **3.** Select high (5.6x, +15dB), medium (1x, +0dB), or low (0.3x, -10dB) gain.

Note: Low gain is recommended for sensitive headphones and IEMs.

- 4. Set the input switch for the input you want to listen to. Select up for the optional card module. Select down for the RCA inputs.
- **5.** Ensure the vents on top of the amp are unobstructed.
- 6. Enjoy your music.

In the box

- 1 x Pietus Maximus
- · 1 x Power cord
- 1 x True Multibit Unison USB DAC Card (optional)
- •1 x Sigma Delta Unison USB DAC Card (optional)

A Safety Precautions

- If you don't know how to install audio devices, get a qualified professional to help.
- Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.
- 3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.
- 4. Use only the supplied power cord or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the power cord from the outlet if the apparatus is unused for a long period of time.
- 5. To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
- 6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

2-Year Limited Warranty

NITSCH warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, NITSCH will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. NITSCH products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@nitschsound.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonable use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall NITSCH be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some states do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.